

STEAM MASTER WINE START UP AND OPERATING PROCEDURES

- CONNECT THE MACHINE TO WATER SOURCE. MACHINE REQUIRES STANDARD TAP WATER, DE-IONIZED OR RO WATER WILL NOT REGISTER ON THE WATER LEVEL SENSING PROBE. THE MACHINE IS FITTED WITH A STANDARD GARDEN HOSE CONNECTOR FOR THIS PURPOSE.
- CONNECT THE MACHINE TO A SUITABLE POWER SUPPLY IN ACCORDANCE WITH LOCAL ELECTRICAL CODES. THE MACHINE CAN BE HARDWIRED FOR PERMANENT INSTALLATION OR FITTED WITH A PROPERLY RATED PLUG FOR PORTABILITY.
- CONNECT THE MACHINE STEAM OUTLET CONNECTION TO YOUR PROCESS. THE MACHINE IS FITTED WITH A TRI-CLAMP SANITARY CONNECTION FOR THIS PURPOSE. ENSURE THAT ANY HOSE OR PIPE FITTED TO THE MACHINE IS SUITABLE FOR THE TEMPERATURE AND PRESSURE OF THE STEAM.
- ONCE THE MACHINE IS CONNECTED TO BOTH WATER AND ELECTRICAL SUPPLIES, AND THE STEAM OUTLET IS PROPERLY CONNECTED TO YOUR PROCESS, TURN THE MAIN SWITCH TO THE “ON” POSITION. THIS SWITCH IS LOCATED ON THE BACK OF THE MACHINE, BELOW THE PUSH HANDLE. ONCE SWITCHED ON, THE MACHINE WILL BEGIN TO FILL WITH WATER, AND EITHER THE LOW OR HIGH PRESSURE RESET BUTTON WILL ILLUMINATE, DEPENDING ON THE CHOSEN SETTING.
- WHEN THE MACHINE HAS FINISHED FILLING, THE RESET BUTTON MUST BE PRESSED TO ENGAGE THE HEATING ELEMENTS. ONCE THIS IS DONE, THE MACHINE WILL BEGIN TO HEAT AND BUILD STEAM PRESSURE FOR USE.
- PRESSURE SETTING MAY BE SWITCHED DURING OPERATION.
 - WHEN SWITCHING FROM THE LOW-PRESSURE TO HIGH-PRESSURE SETTING, TURN THE PRESSURE SELECTOR KNOB TO THE RIGHT, AND THE “HIGH PRESSURE RESET” BUTTON WILL ILLUMINATE IMMEDIATELY. PUSH THIS BUTTON TO RE-ENGAGE THE HEATING ELEMENTS. THE MACHINE WILL THEN CONTINUE TO BUILD PRESSURE AND CYCLE AT THE HIGH-PRESSURE SETTING.
 - WHEN SWITCHING THE MACHINE FROM THE HIGH-PRESSURE SETTING TO THE LOW-PRESSURE SETTING, TURN THE KNOB TO THE LEFT. AT THIS TIME, THE “LOW PRESSURE RESET” BUTTON WILL **NOT IMMEDIATELY ILLUMINATE**. INSTEAD, THE PRESSURE WILL FALL UNTIL THE MACHINE APPROACHES THE LOW-PRESSURE SETTING. ONLY WHEN THE MACHINE FALLS INTO THE LOWER OPERATING RANGE, WILL THE “LOW PRESSURE RESET” ILLUMINATE. ONCE IT DOES, PRESS IT TO RESET, AND THE MACHINE WILL CONTINUE TO CYCLE AT THE LOWER PRESSURE SETTING.